

CPI system

400 series

Self Service Credit Card Terminal
for Copy Machines




www.CPIsystem.com
Copy Network Inc.

CPI system


Index:	Page
Chapter 1. CPI system General index	2
1-1. Index.....	2
1-2. Parts Index.....	3
1-3. CPI Series	5
1-4. System Requirements	5
1-5. CPI Module	6
1-6. Features	7
Chapter 2. System setup	8
2-1. Floor Stand Setup	8
2-2. 420 Setup (for copiers)	9
2-3. 470 Setup (for Fax)	9
2-4. 490 Setup (for computers)	10
2-5. Print Release Station	11
2-6. Frequently Asked Questions	12
Chapter 3. Technical Overview	13
3-1. Module Basic Layout	13
3-2. Copier Interfacing	14
3-3. Pulse Voltage Selection	14
3-4. Module Mounting	15
3-5. Fax Processing	15
3-6. Voids and Refunds	16
3-7. Sample Directions Page	17
3-8. Transaction Receipts	18
3-3. Program Chip Replacement	19

Chapter 1 Parts Index

Your CPI system upon arrival should contain the following parts :

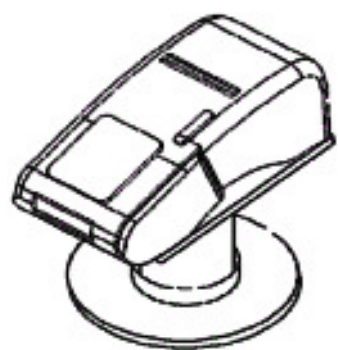

CPI Terminal

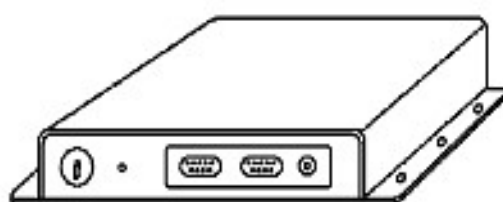

Processing Module



Interface Cable



Paper Roll




Remote



Bypass Keys



Power Cord

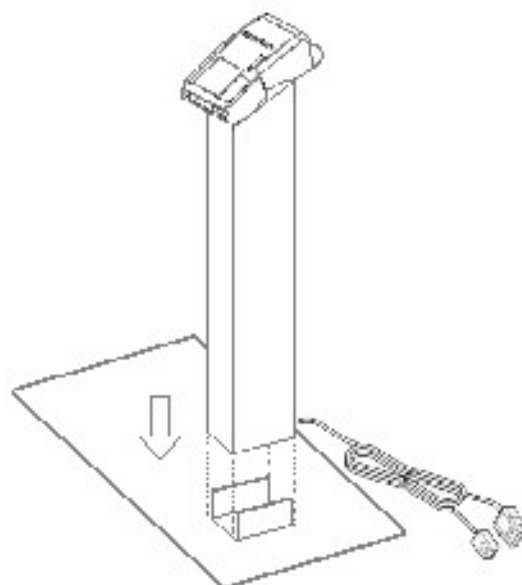

A Floor Stand might also be included in your setup.



CPI Terminal: The CPI system uses the VeriFone Vx570 credit card terminal for Processing, LCD Display and receipt Printing.



CPI Processing Module: A plastic box housing the electronic circuits and copier interface module.



 
Interface Cable: Custom designed communication cable for copier, printer, fax and computer interfacing.



Remote Control: Activates the CPI system from up to 40 feet away. Prints a receipt for cash payment at any register or to be charged to a hotel room account.



Bypass Key: Used to bypass the CPI system and to provide management level access to the terminal.




Receipt Paper: For replacement make sure paper rolls out from under the paper roll. Use **thermal 2 1/4" x 85'**.




Power Cord: The CPI system operates on 110-220V, 50- 60hz, at 1.5A power consumption.

Floor Mount setup

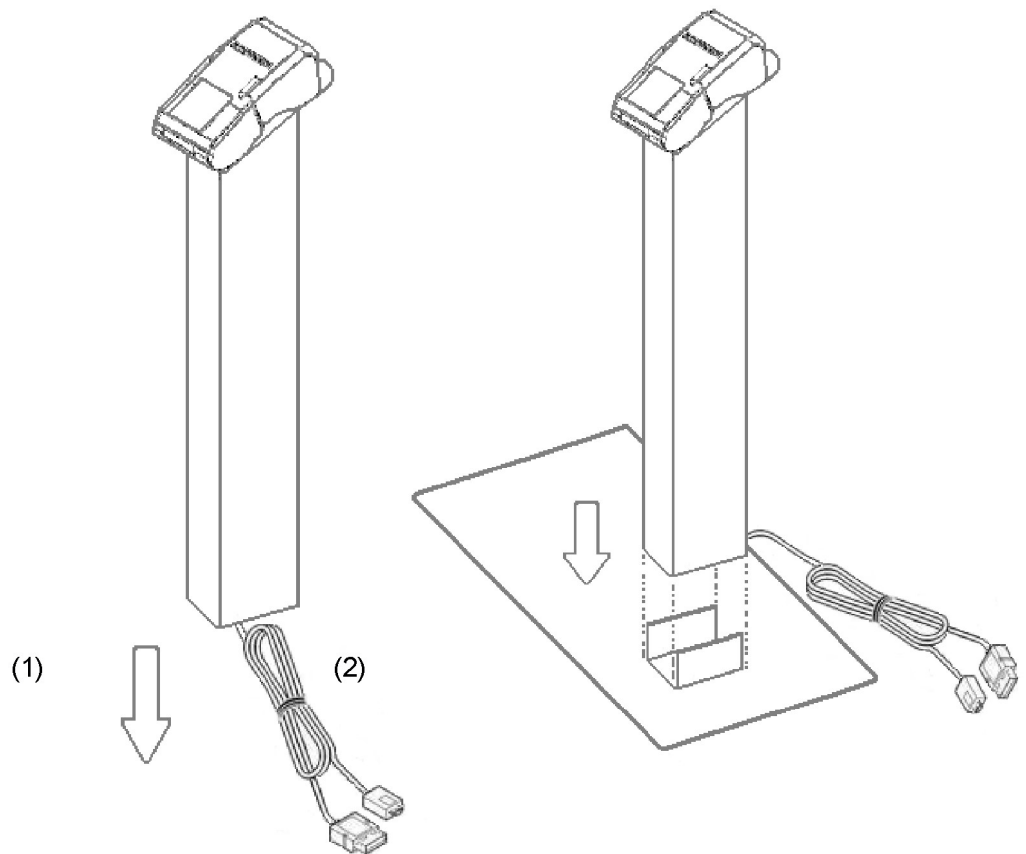


- (1) Remove cables from inside the CPI stand.
- (2) Attach stand to the floor base. Make sure the cables run through the cut-out section at the back of the stand.
- 3) Place screws in their positions. If more than one system, make sure you use the proper base with each stand. Insert first the front screws. Do not over tighten the back screws.
- (4) Slide left side of the stand under the copier.
- (5) Secure connectors to the CPI Module as described in Chapter 2.2 diagram and plug phone line in wall outlet.
- (6) Plug in the power, the system will take about a minute to cycle. Once the display shows: "SWIPE CARD TO ACTIVATE COPIER" it would be ready to use. First press the remote button for a couple of seconds, the system should activate the copier. Make a few copies then press the Green Button.
- (7) Swipe a credit card and make a few copies then press the Green Button.

CPI 420 setup for Copiers and Printers

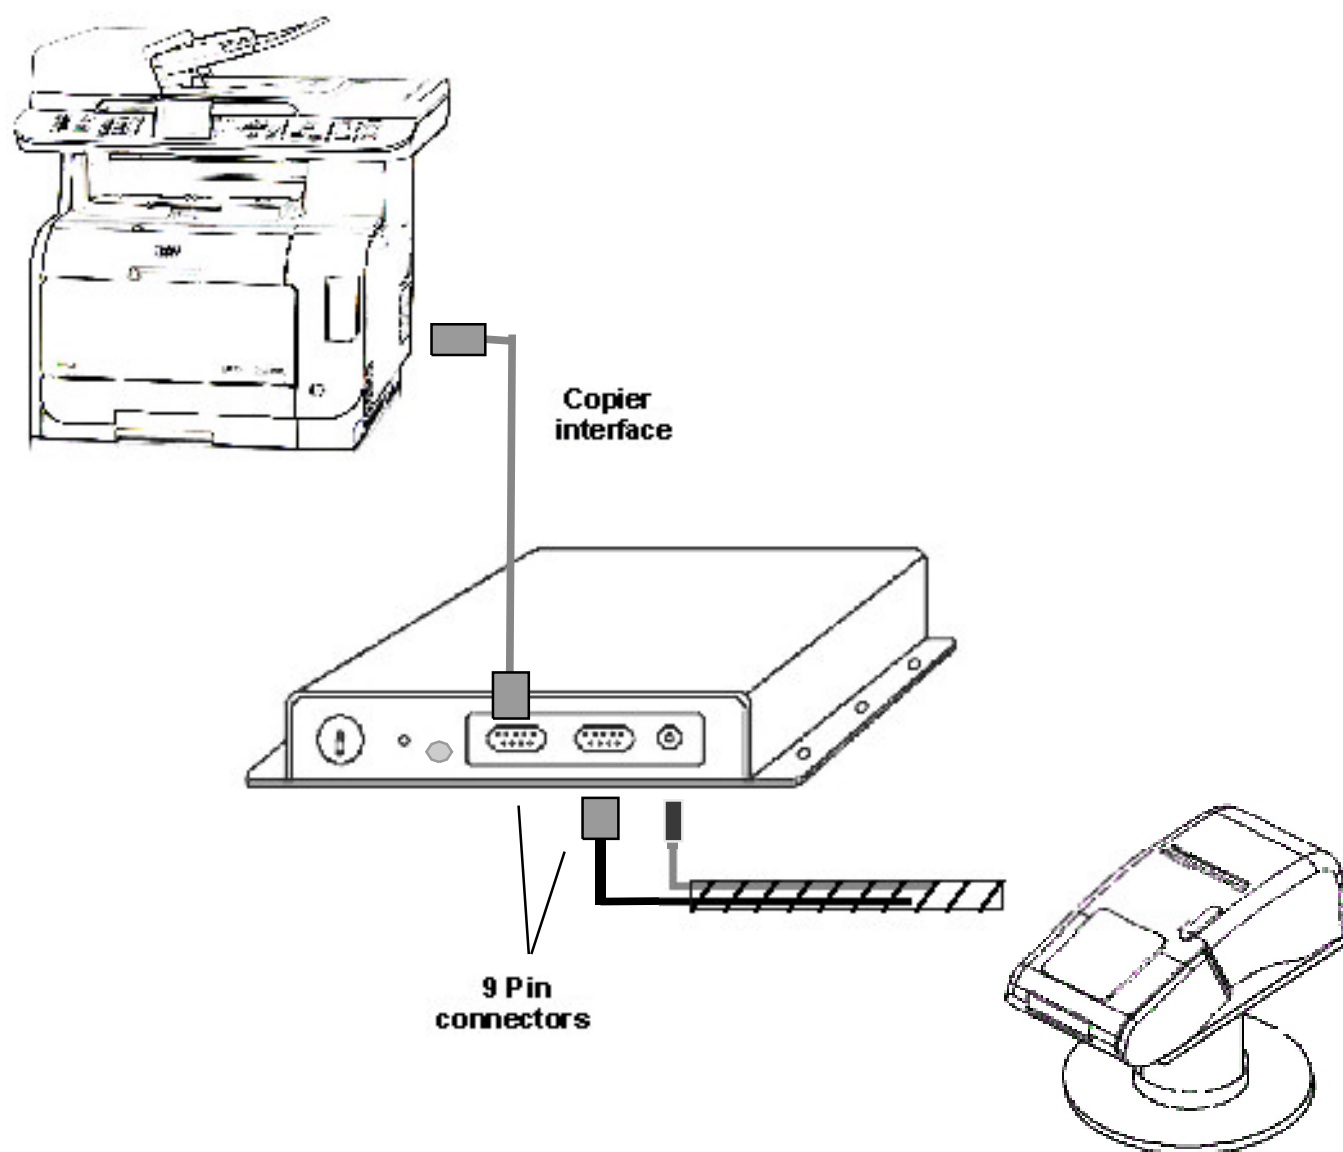

CPI 490 setup for Computers and Printers

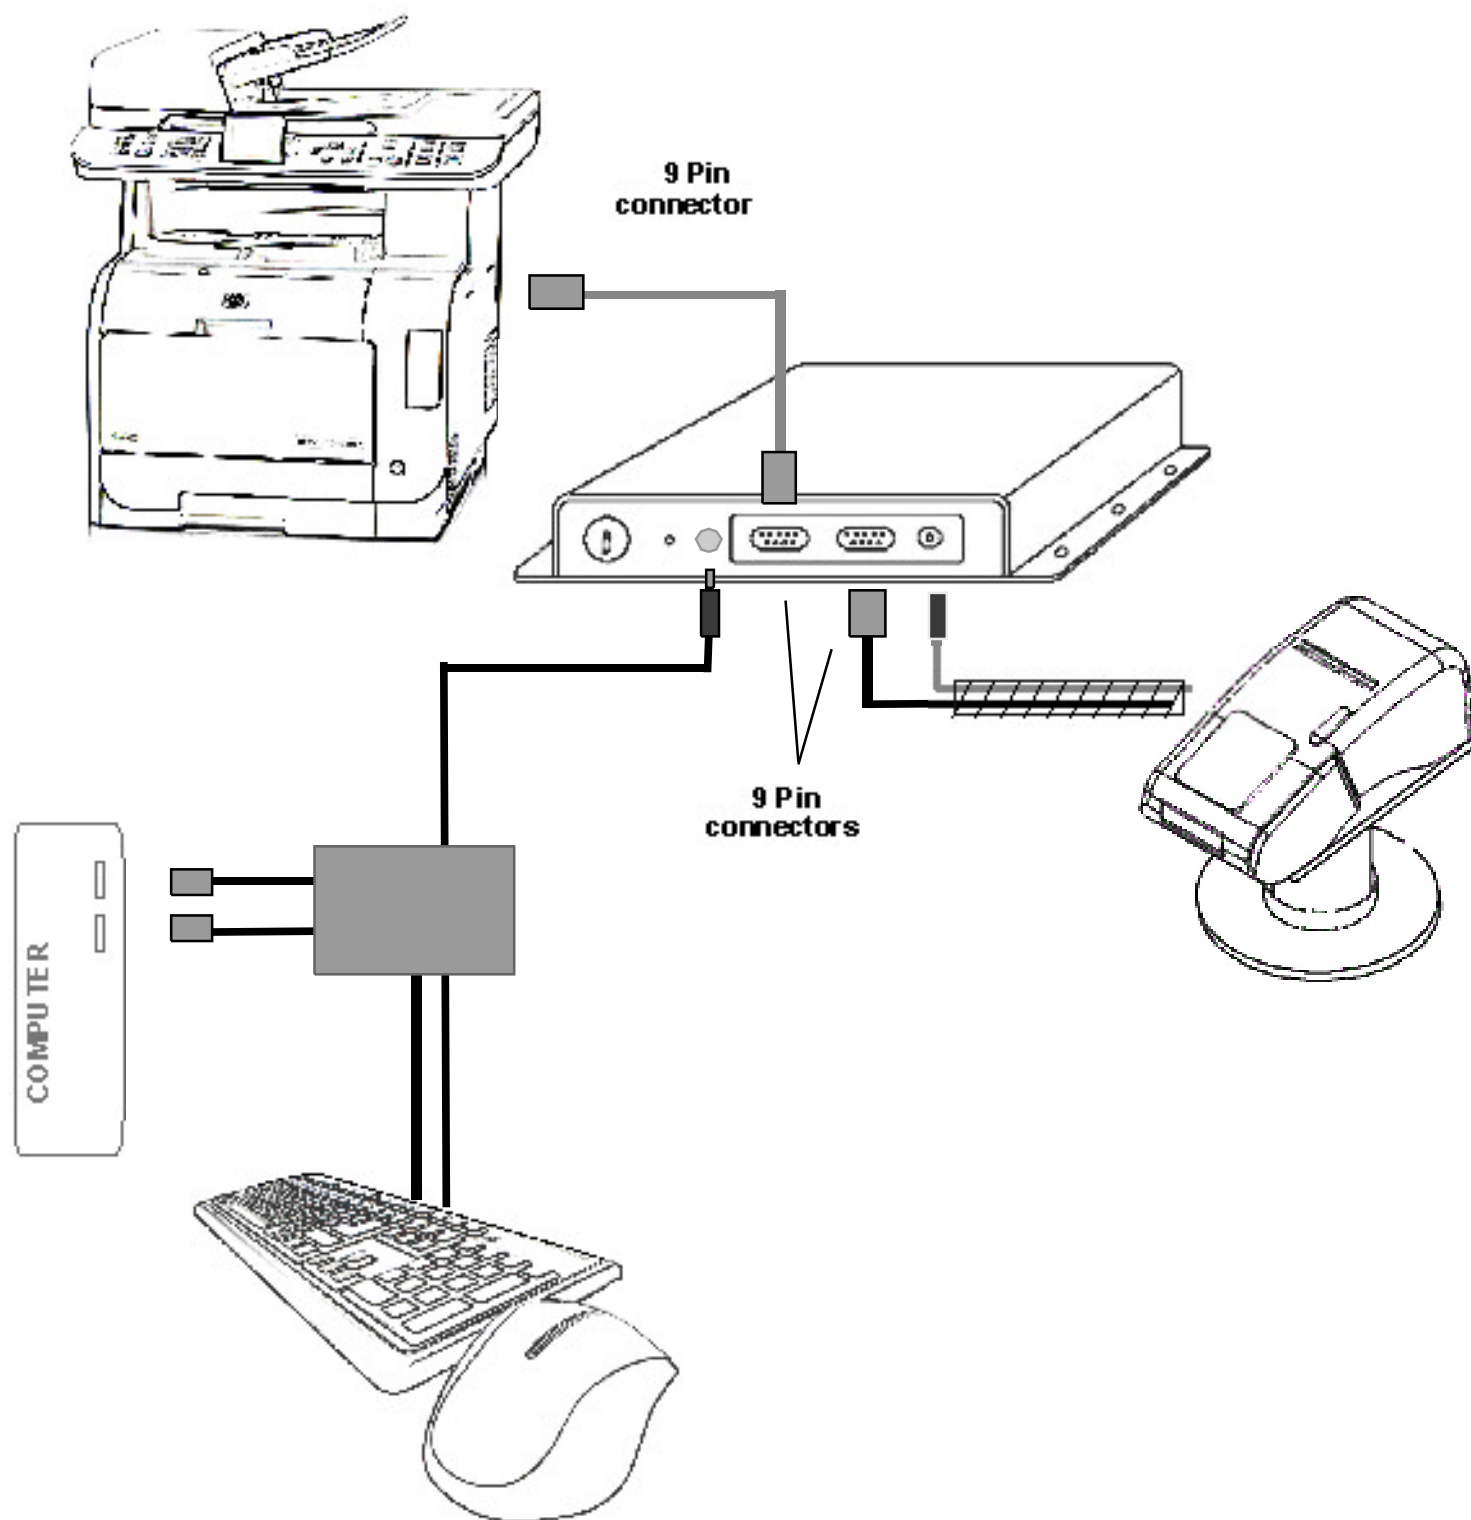


Print Release Stations:


The CPI system can provide a credit card payment option for print release stations where print jobs are selected by a print release software prior to be printed. This will allow the user to select and pay for their own prints.

Where the print release station is a computer, the CPI mouse must be installed on the print release station (computer) and connected to the Printer. Once a credit card is swiped the system will enable the mouse to select the print job. Every page printed will generate a pulse and increment the page count.

Where the print release station is a MFP or printer, the print ability will be disabled until a credit card is swiped as a regular copier.

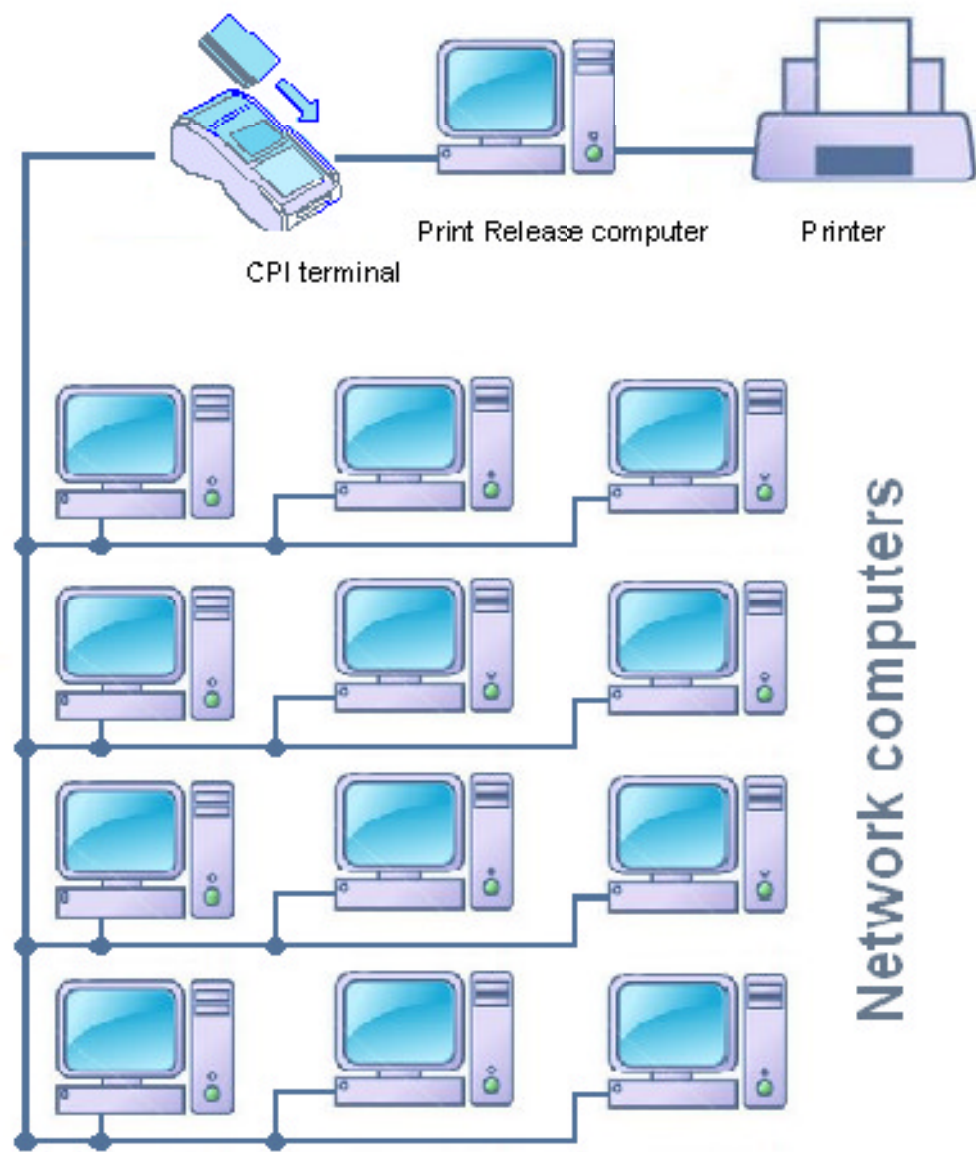

CPI Module

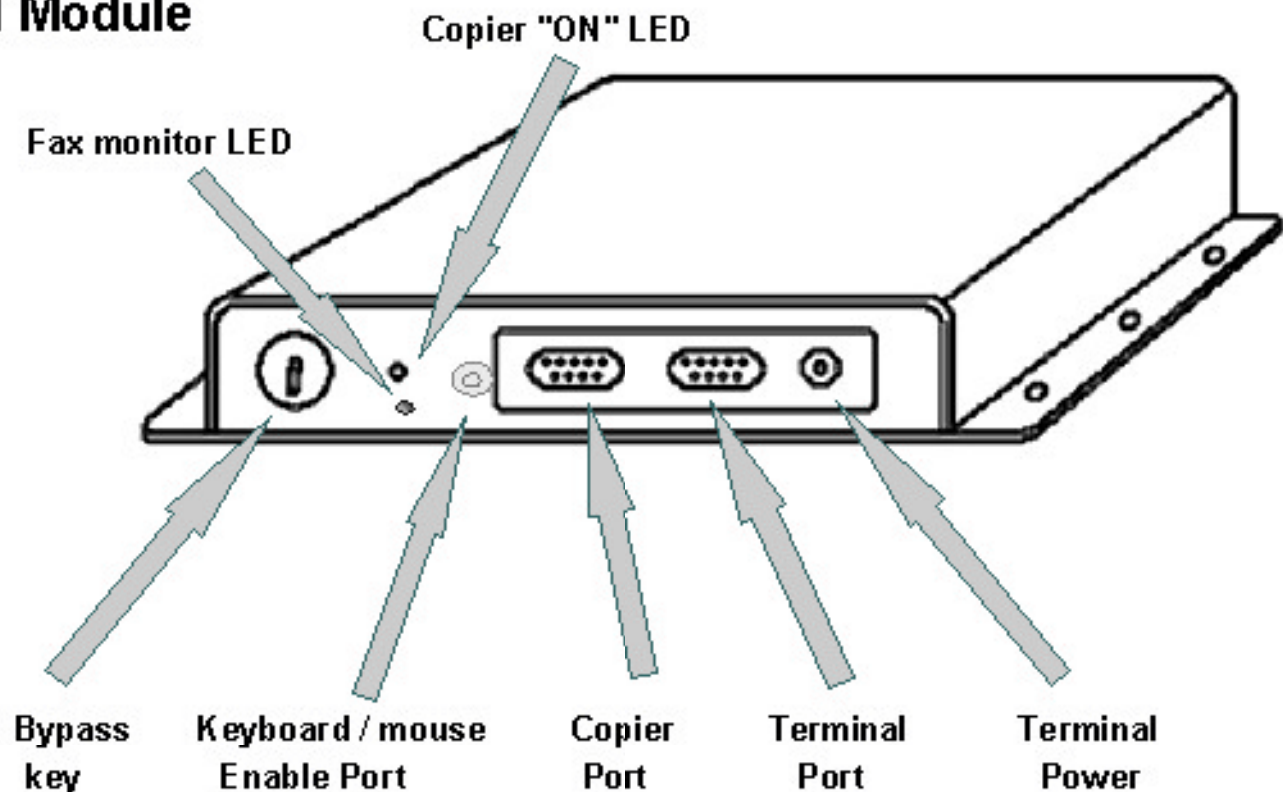


Bypass key: Used only by management for programming level control

Keyboard / mouse Enable Port: Used for mouse and keyboard control

Copier Port: Attaches to the copier interface cable. (see diagram below)

Terminal Port: Attaches to the 9-pin serial terminal connector

Terminal Power: Attaches to the 9V terminal power plug **+9V**  **Ve**


Copier "ON" LED: Indicates when the copier is Activated

Fax Monitor LED: Displays the analog Fax trasmission signal

Pin # function (Not for Xerox copiers)

1	Main Pulse (+25V . . . +5V)
2	Ground (- ve)
3	Color Pulse (+25V . . . +5V)
6	Enable
8	Enable

9 pin Copier Port

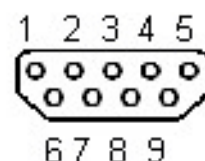


Interfacing the CPI system to a copier :

The CPI system can monitor up to 3 pulse lines (4 on Xerox copiers) up to 480 pulses per minute and can charge for any combination of the above price lines.

The copier voltage must be selected properly on both the Main Pulse and the Color Pulse. The jumper on Main Pulse is the top one and the Color Pulse is the lower one. If the voltage is 24V the jumper must remain all the way to the left. If around 15V place it should be in the middle and if it is 5V place it to the right.


The same is done for the Color Pulse voltage. Most likely it will be 5V and the jumper would need to be placed to the right.

Please note that some copiers have both the Color and B/W Pulse on the Main line.

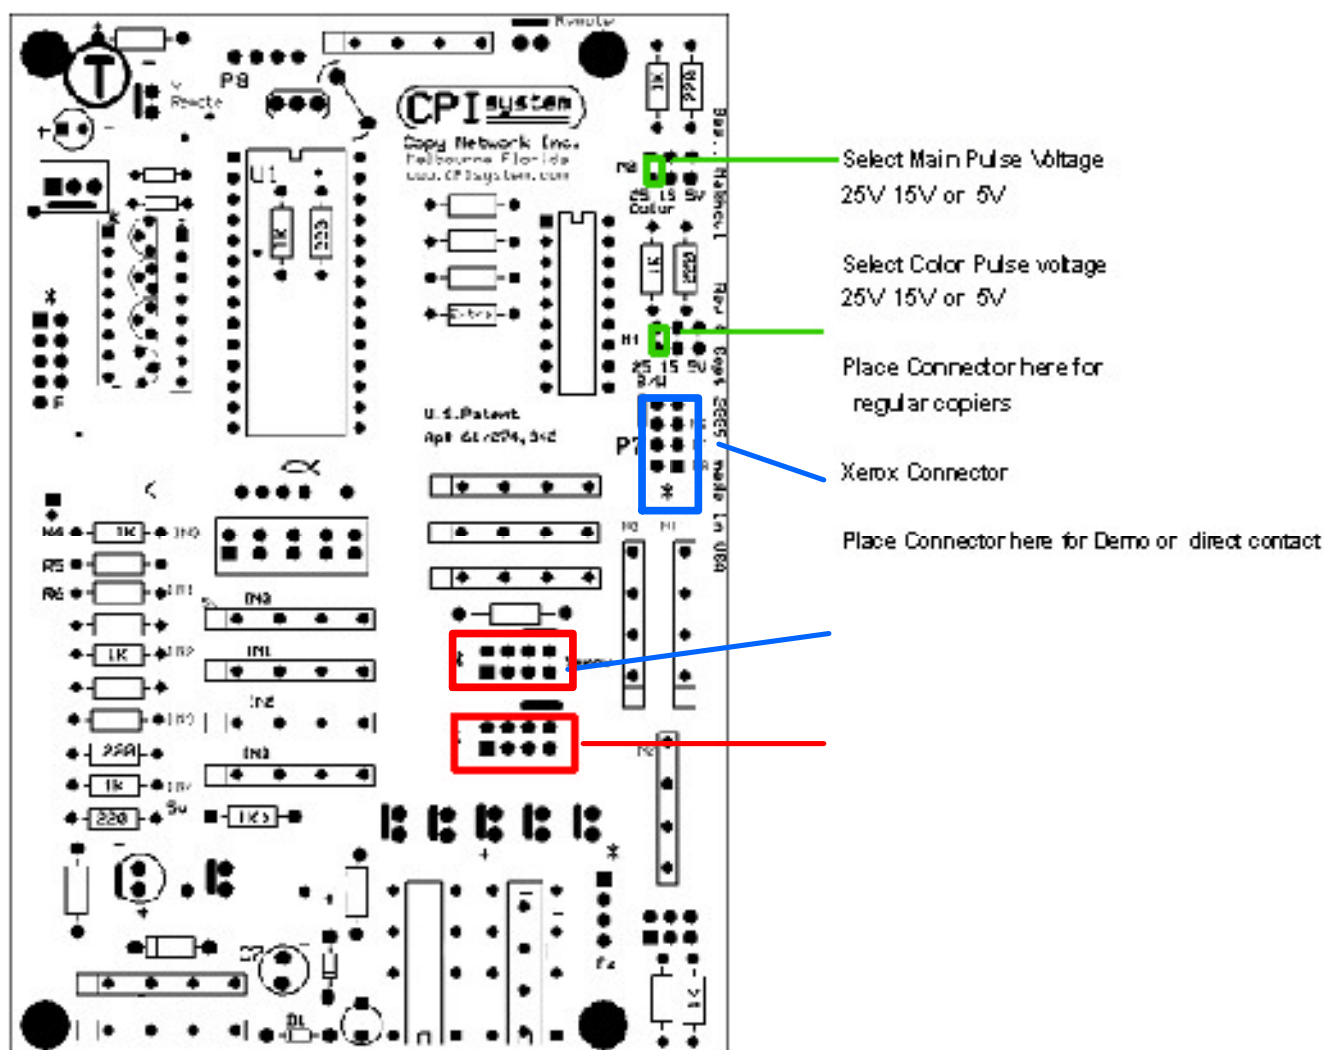

Module Mounting and Connections:

The Processing Module can be mounted with screws on the back of the copier base or copier. Use caution not to damage any components while drilling.

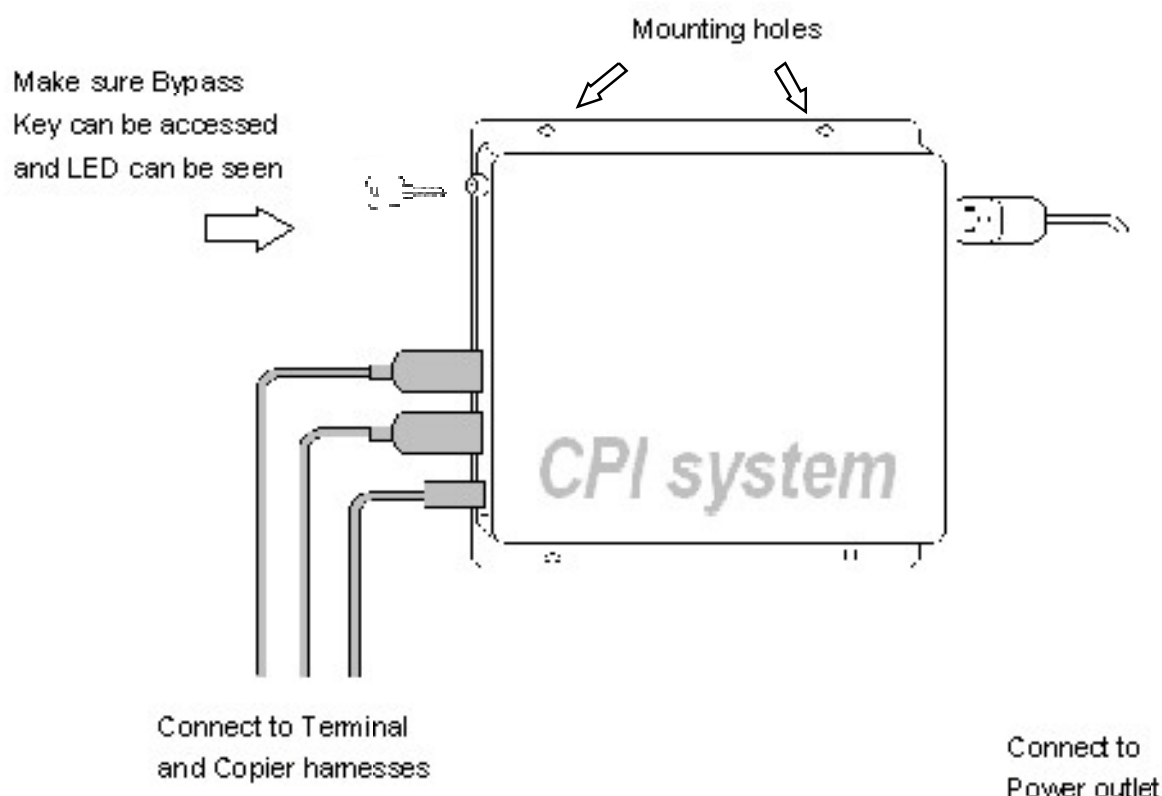

Fax Processing:

The CPI system can share the same phone line with the Fax machine.

The built in Fax Processor monitors the phone line and bills for each transmitted fax page. Fax machines attempt to re-send a page if not transmitted properly to the receiving unit due to phone line error, noise or unit not ready. This process is normal for fax communication and may result in an additional fax page count and charge to the customer.

The CPI system will not charge for busy lines or failed fax transmissions.

Directions

for using the self service Copier
and Fax




- (1) Swipe card as indicated with magnetic stripe to the LEFT.
- (2) In a few seconds your card will be validated and the Copier will be ready to use. The CPI will display the number of pages copied or faxed.
- (3) When you are finished, press the **Green button**.
Within a few seconds a receipt will be printed. Tear receipt by pulling forwards then to the side.

B/W Copies : 10 cents each
Color Copies : 75 cents each
Sent Fax : \$1.00 per page

For Non credit card users, ask front desk to activate the copier. When done press **Green button** then take invoice to the register for payment.

Transaction Receipts:

The CPI system provides two types of receipts, one credit card activated and the other remote activated. Both show the number of copies made and total sale amount. The credit card receipt contains the credit card transaction data.

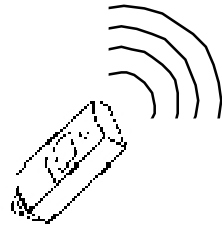

You have Made:

12 B/W copies for \$ 1.20
4 colored copies for \$ 1.60
0 11x17 copies for \$ 0.00

Total Sale = \$ 2.80

Please take receipt # G4541
to any Register for payment

Remote Activate Receipt

LAKE WASHINGTON TECH
132ND AVE. NE.
KIRKLAND, WA 98034

Merchant ID: 0002G548
VISA *****4500
Entry Method: Swiped
App Code:117 Batch #0236
Inv #058 11:45 am 9/2/2010
Total : \$2.80

You have Made:

12 B/W copies for \$ 1.20
4 colored copies for \$ 1.60
0 11x17 copies for \$ 0.00

Total Sale = \$ 2.80

Credit Card Receipt

Copy Network Inc.

6145 Megan Dr., Suite 100
Melbourne, FL 32940
U.S.A.
(321) 622-5677